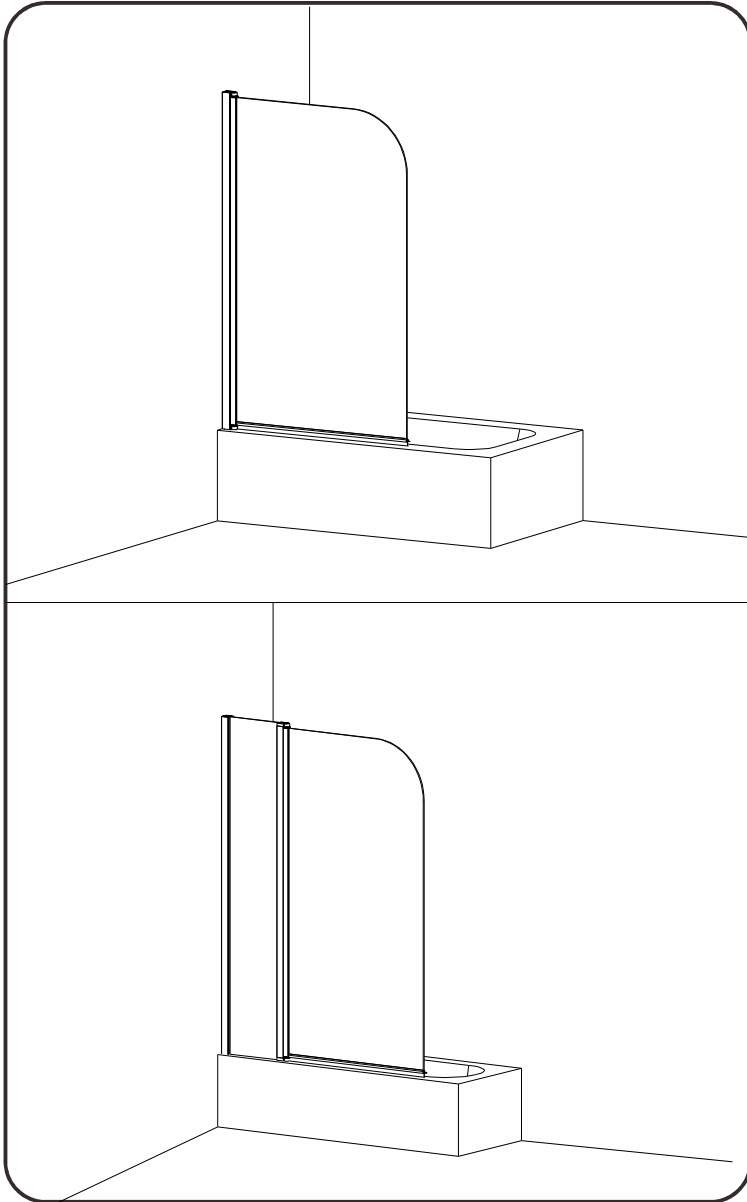# Single Round Bath Screens
Double Round Bath Screens

INSTALLATION INSTRUCTIONS

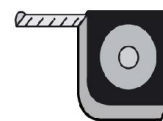### Tools Required

Drill

6mm Masonry Drill
3.2mm HSS Drill

Spirit level

Sealant Gun

Tape Measure

Pencil

PH2 TYPE Screwdriver

Please not hand tools **NOT** supplied.

IMPORTANT

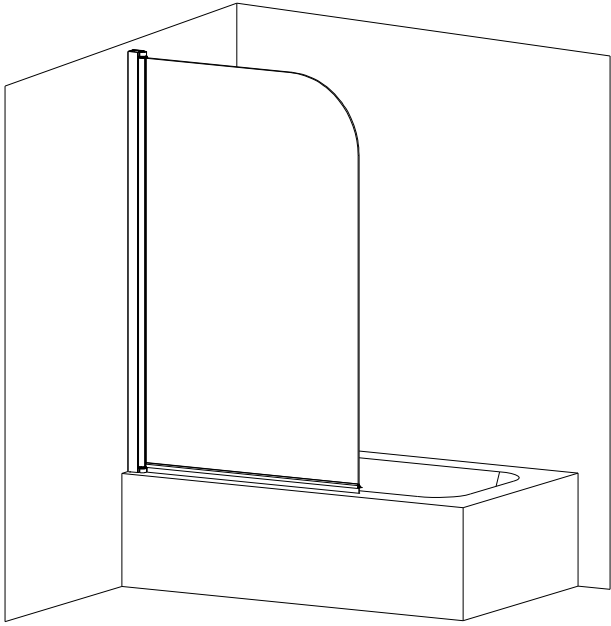These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls.Hollow or stud-partition walls will require alternative fixings.Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.
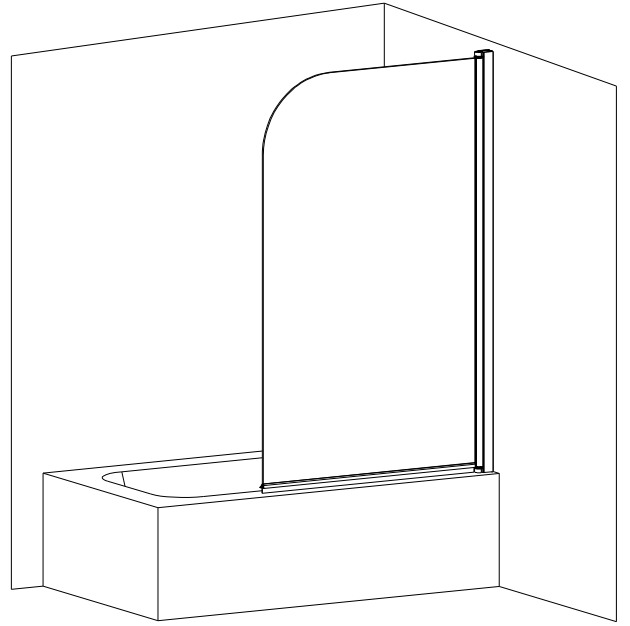
Components And Box Contents
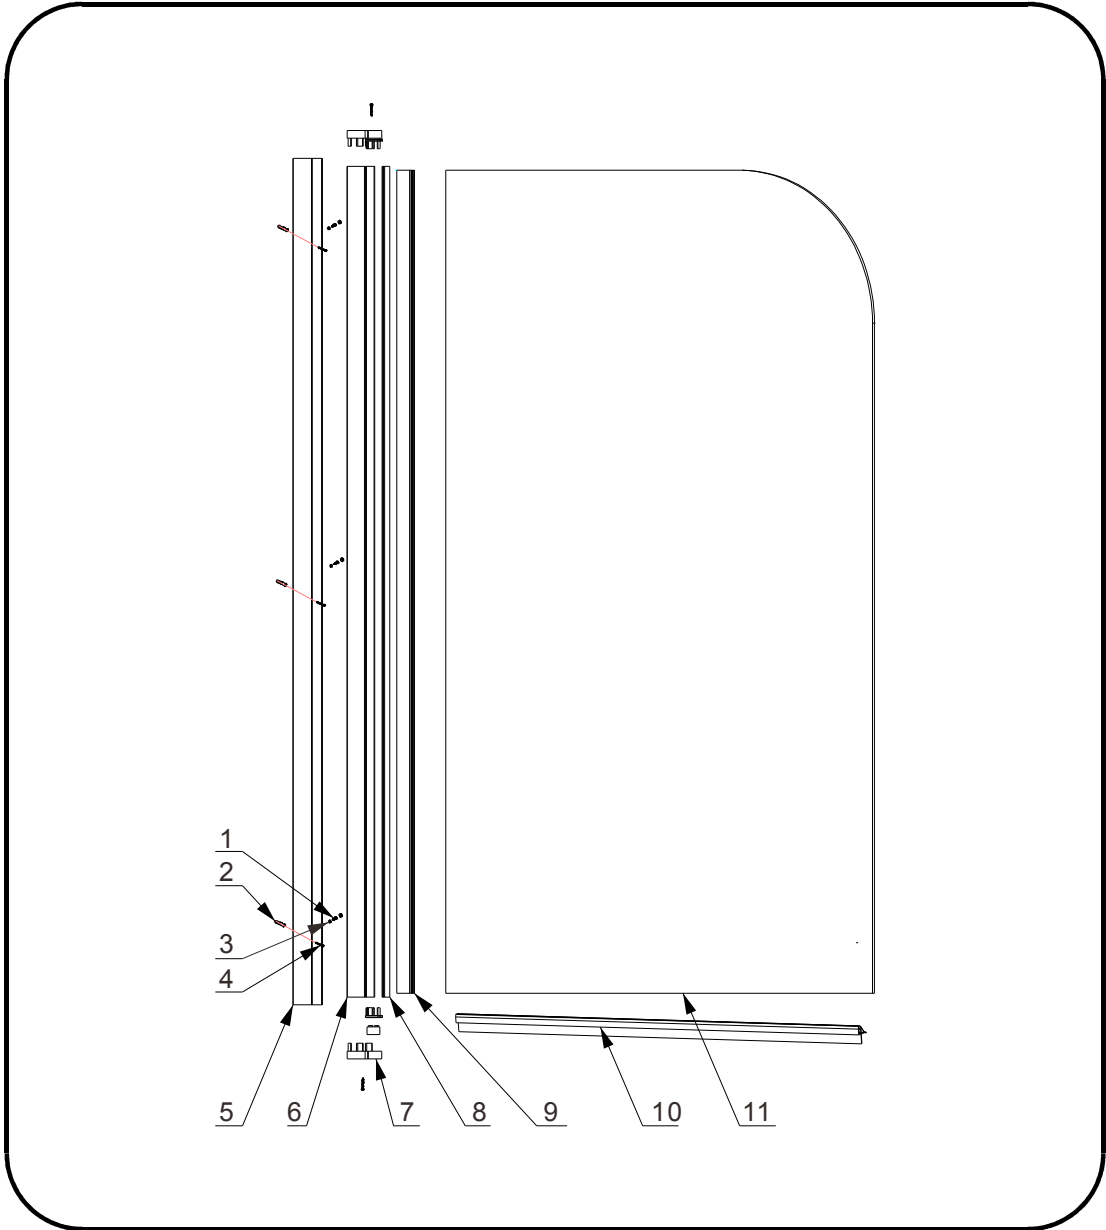
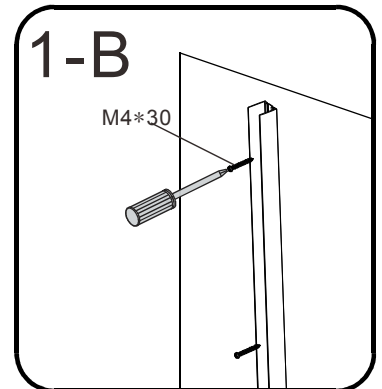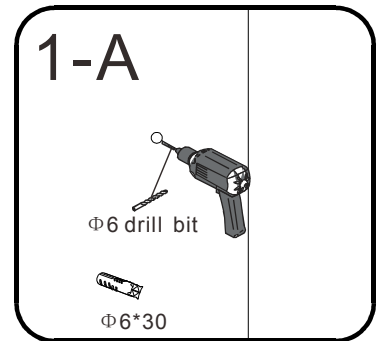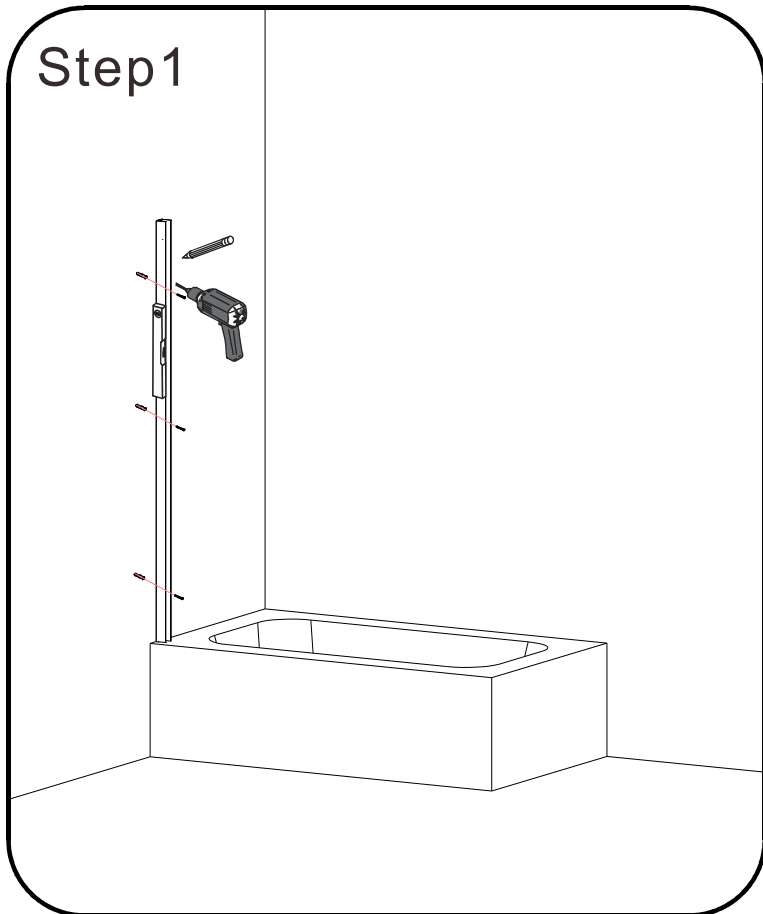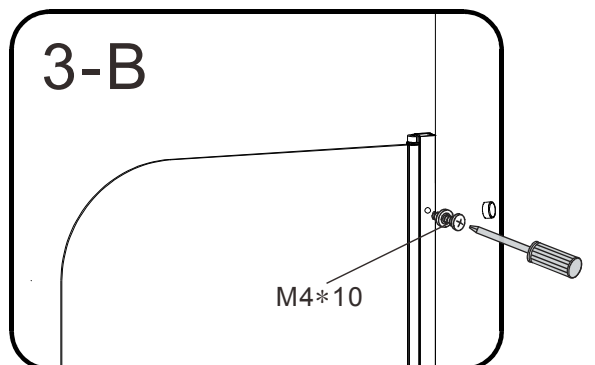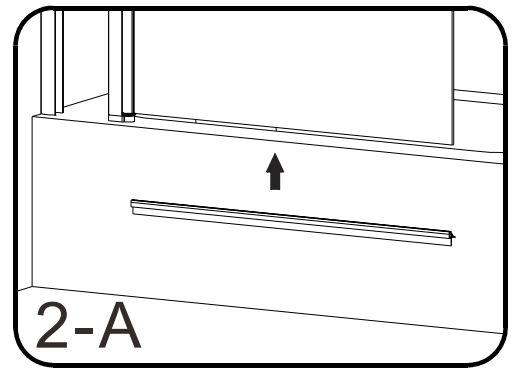| NO.	Code	Description	Qty	NO.	Code	Description	Qty
1	BNSR-01	Screw M4*10	3	7	BNSR-07	Hinge	2
2	BNSR-02	Wall Plug	3	8	BNSR-08	Vertical Seal	1
3	BNSR-03	Screw cover Caps	5	9	BNSR-09	Fixed Profile B	1
4	BNSR-04	Screw M4*30	3	10	BNSR-10	Bottom Seal	1
5	BNSR-05	Wall Profile	1	11	BNSR-11	Moving Glass Panel	1
6	BNSR-06	Fixed Profile A	1				

Left

Right

Installation Steps

Step1

1-A

Φ6 drill bit

Φ6*30

1-B

M4*30

Step2

2-A

2-B

Step3

3-A

Φ3.2 drill bit

3-B

M4*10
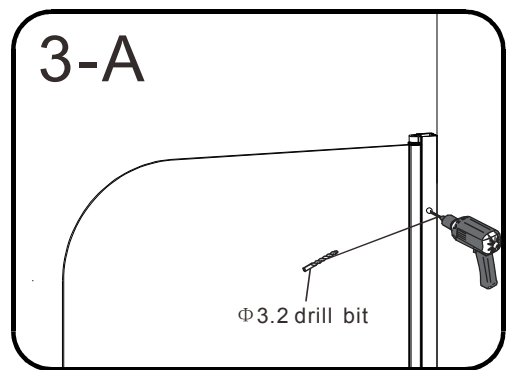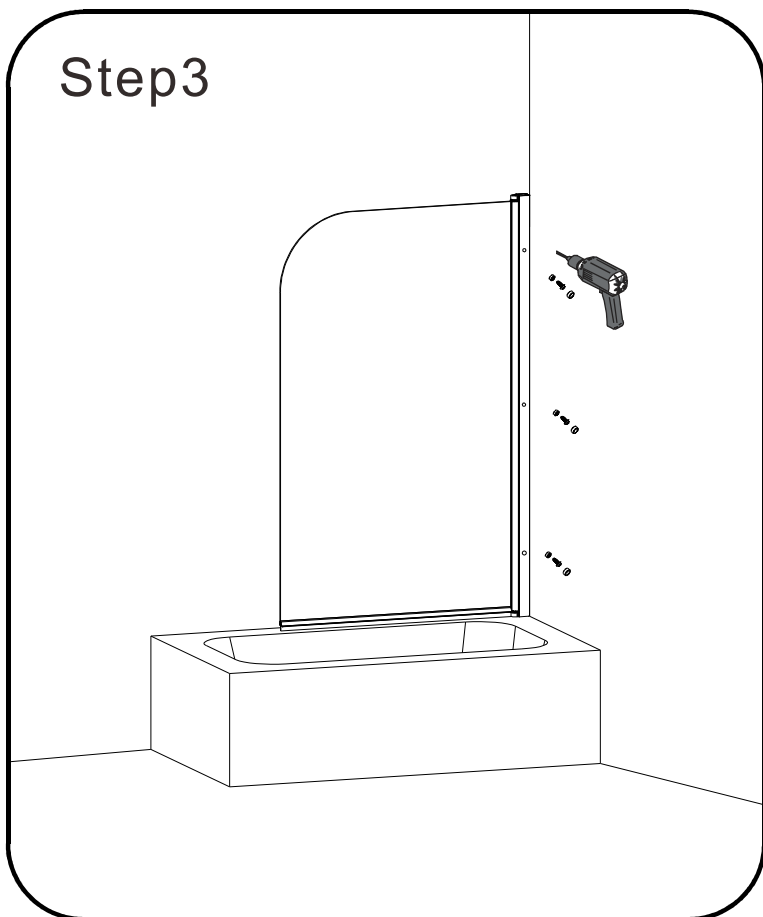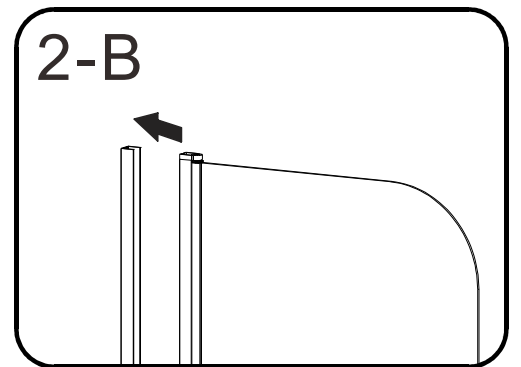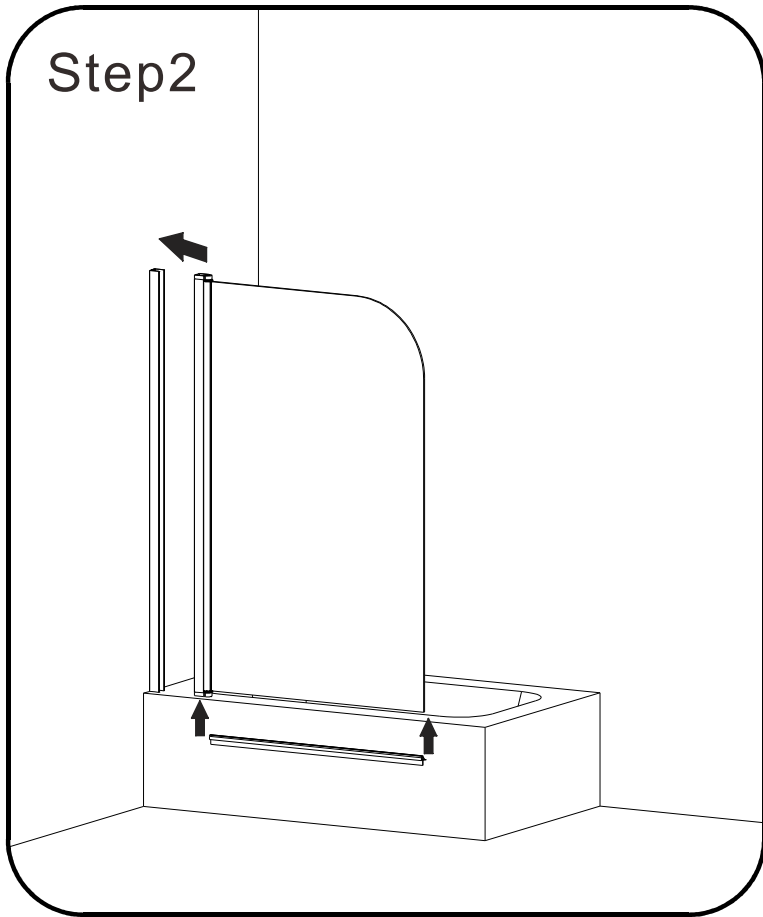
Step4
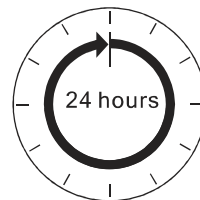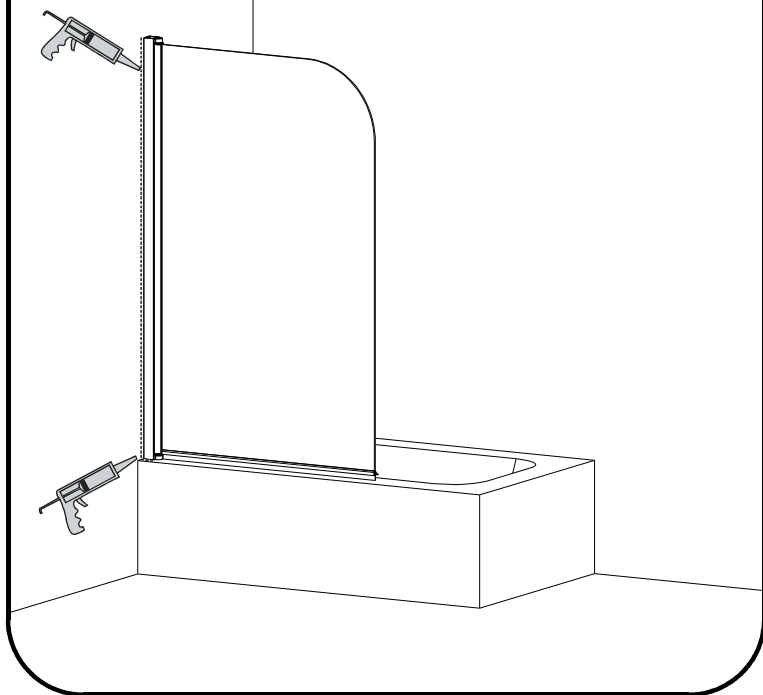
24 hours
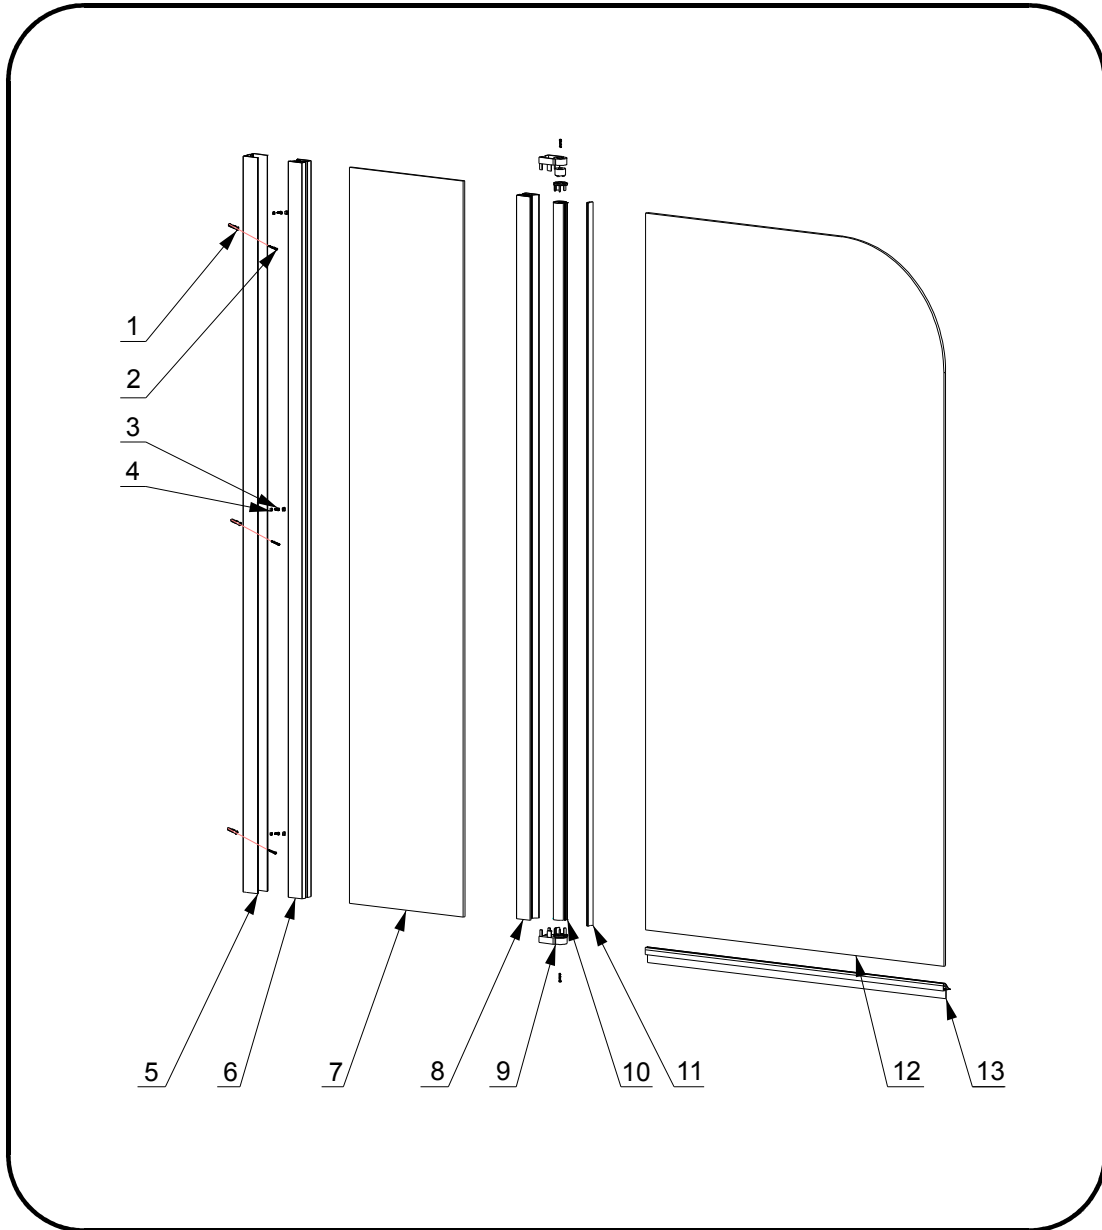
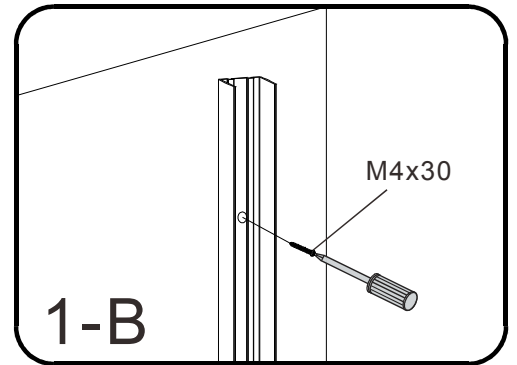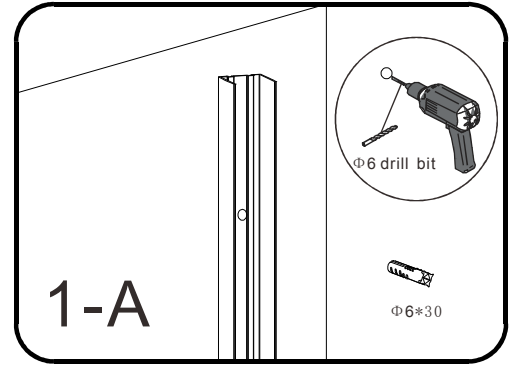**Allow 24 hours for silicone to dry before use.**
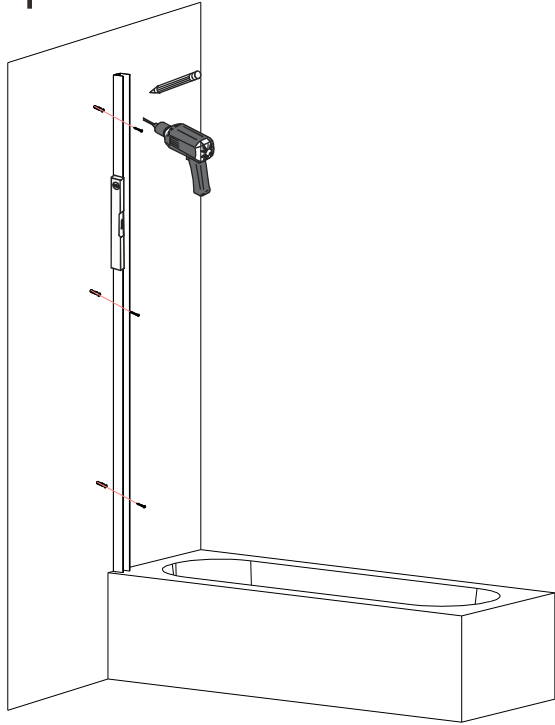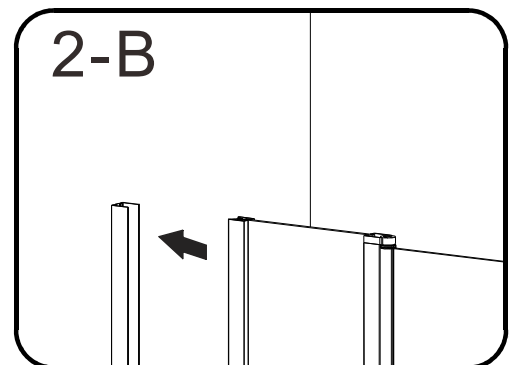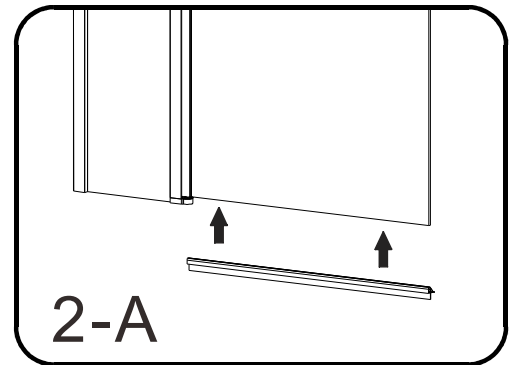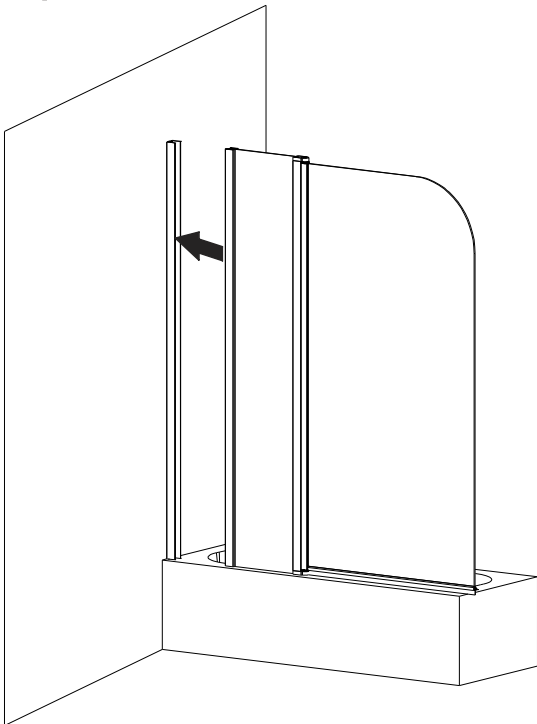
Silicone on the outside edge only

Components And Box Contents

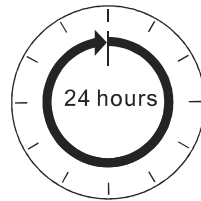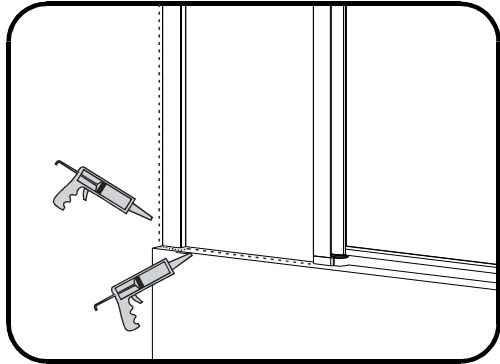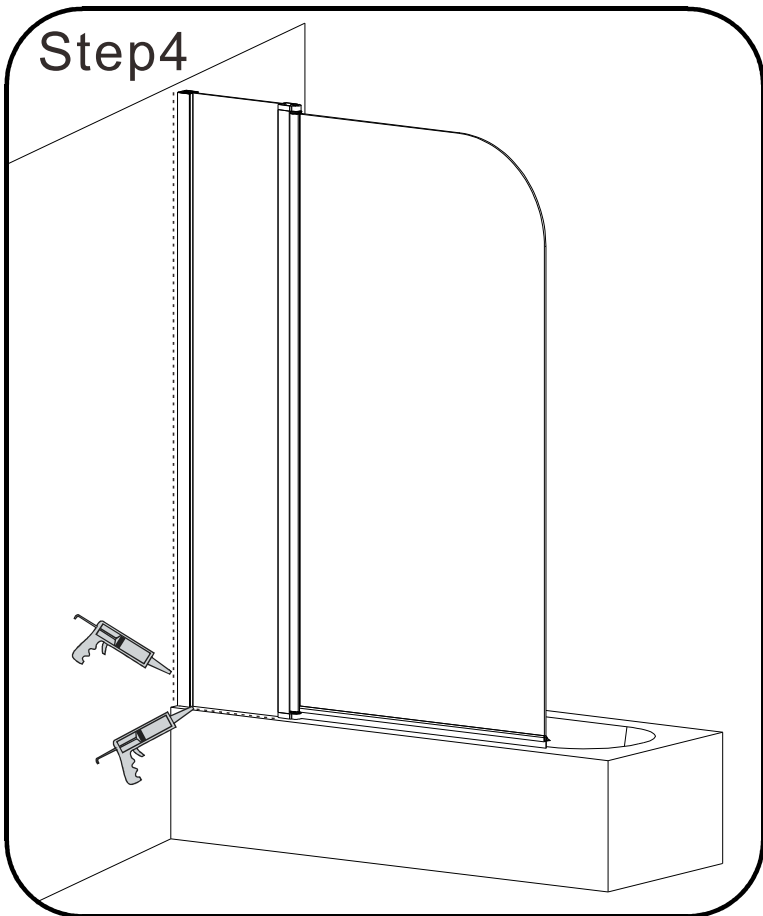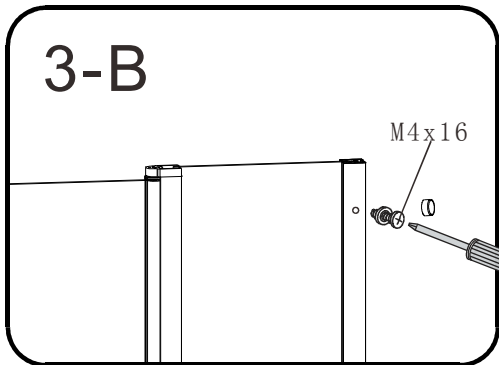| NO.	Code	Description	Qty	NO.	Code	Description	Qty
1	BNDR-01	Wall Plug Φ6*30	3	8	BNDR-08	Fixed Profile B	1
2	BNDR-02	Screw M4*30	5	9	BNDR-09	Hinge	2
3	BNDR-03	Screw M4*16	3	10	BNDR-10	Fixed Profile C	1
4	BNDR-04	Screw cover Caps	3	11	BNDR-11	Vertical Seal	1
5	BNDR-05	Wall Profile	1	12	BNDR-12	Moving Glass Panel	1
6	BNDR-06	Fixed Profile A	1	13	BNDR-13	Bottom Seal	1
7	BNDR-07	Fixed Glass Panel	1	14			

Installation Steps

Step1

Step2

1-A

Φ6 drill bit

Φ6*30

1-B

M4x30

2-A

2-B

6

Step3

3-A

Φ3.2 drill bit

3-B

M4x16

Step4

24 hours
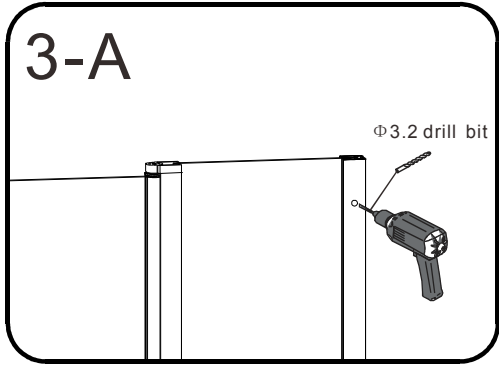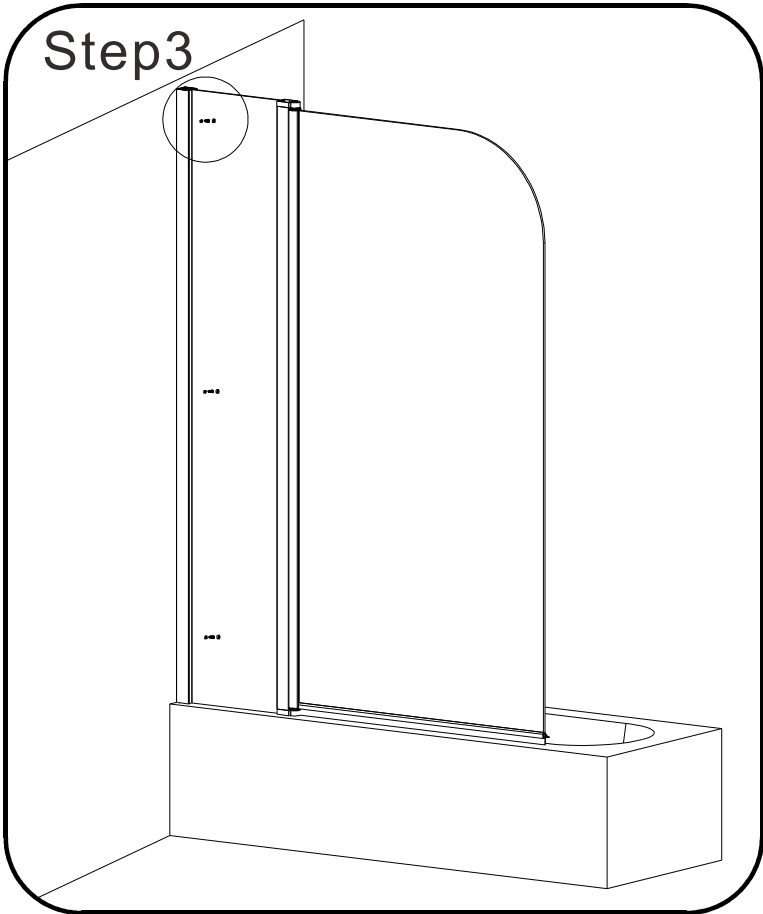
Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only

7