EZ Fit Quadrant and Offset Quad
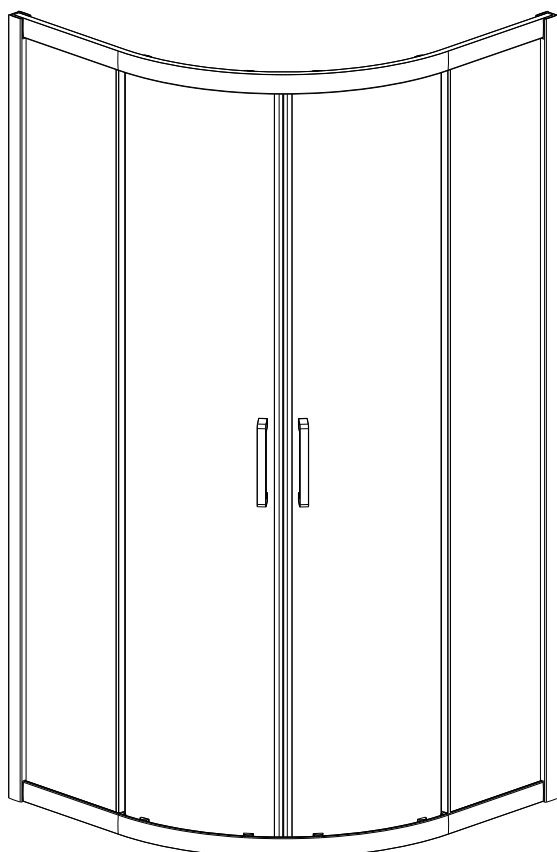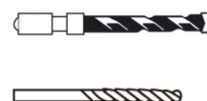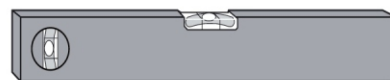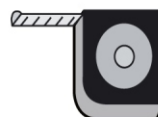
Tools Required

Drill

6mm Masonry Drill
3.2mm HSS Drill

Spirit level

Sealant Gun

Tape Measure

Pencil

PH2 TYPE Screwdriver

Please not hand tools **NOT** supplied.

IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls.Hollow or stud-partition walls will require alternative fixings.Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.
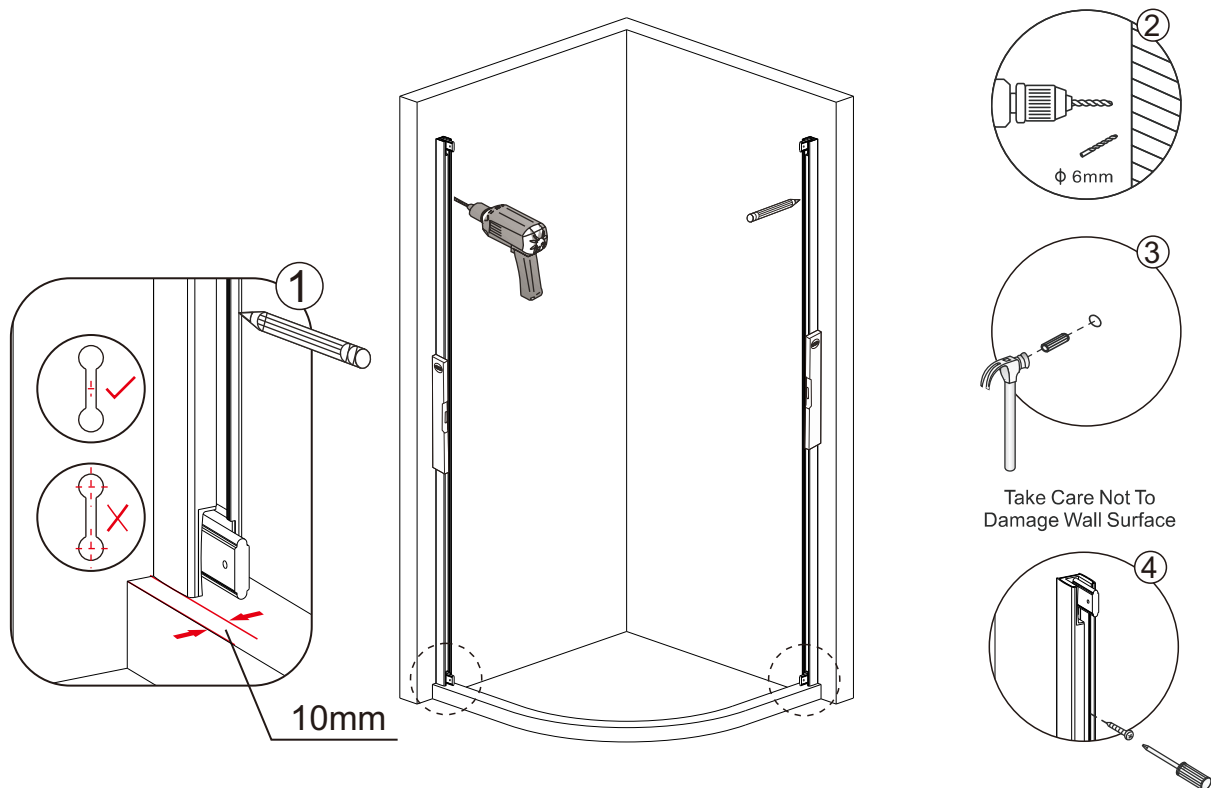
Components And Box Contents
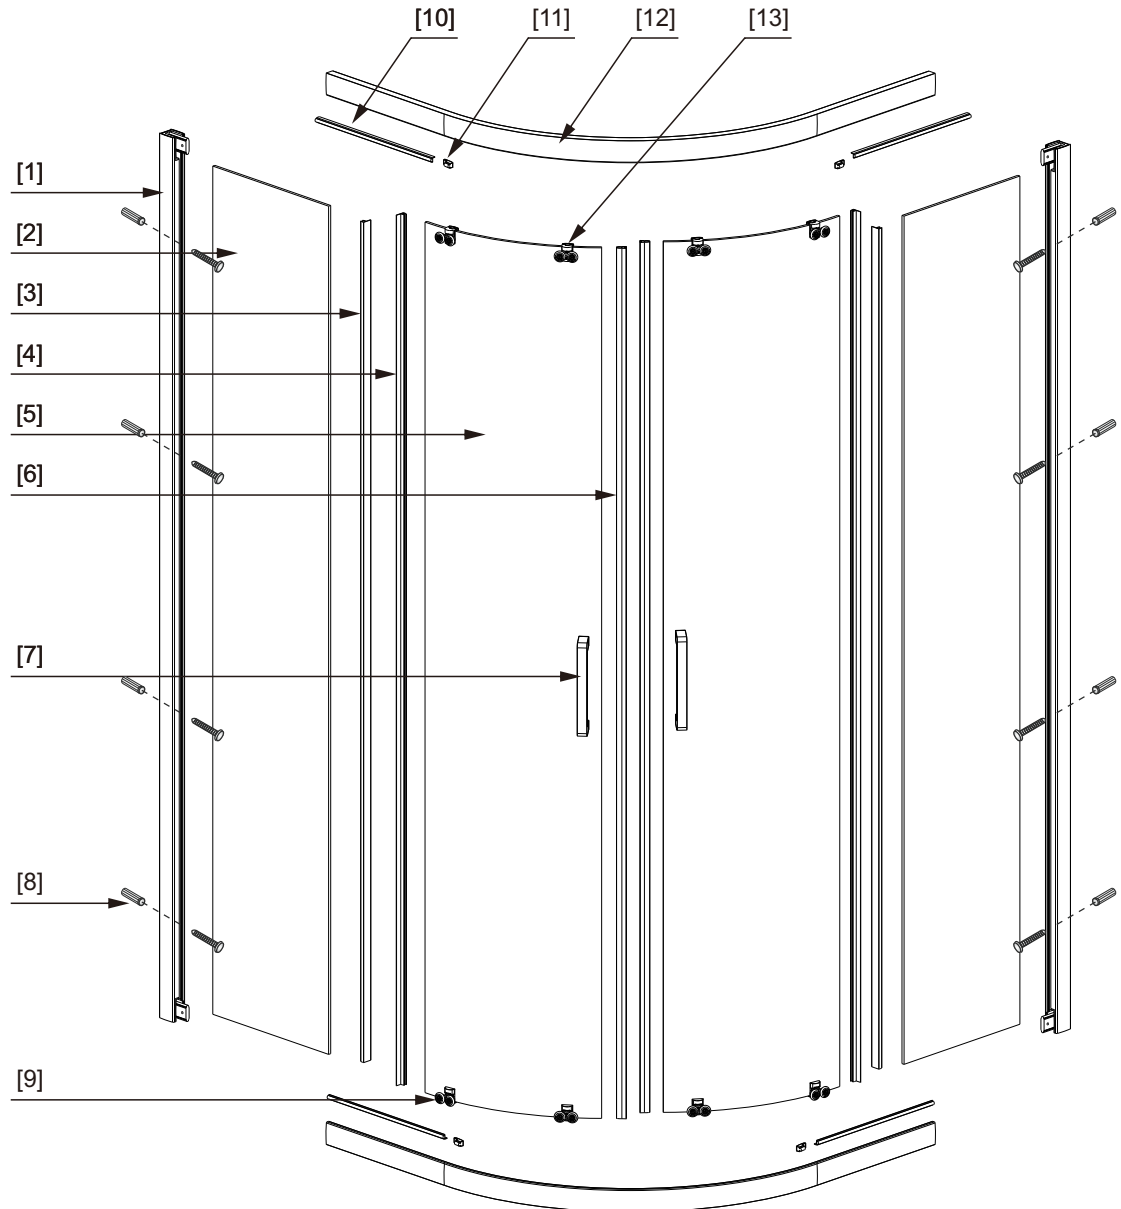
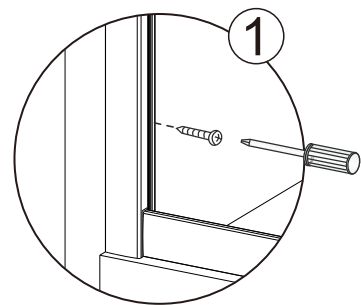| NO.	Code	Description	Qty	NO.	Code	Description	Qty
1	NQ-01	Wall profile	2	8	NQ-8	Screw 4∗30+Wall plug	8
2	NQ-02	Fixed panel	2	9	NQ-9	Bottom Double Rollers	4
3	NQ-03	Vertical seal for fixed panel	2	10	NQ-10	Seals for rail	4
4	NQ-04	Vertical seal for moving panel	2	11	NQ-11	Chrome piece	4
5	NQ-05	Moving panel	2	12	NQ-12	Rail	2
6	NQ-06	Metal magnetic strip	2	13	NQ-13	Upper Double Rollers	4
7	NQ-07	Handle	2				

2

◆ Installation Steps

Step 1

φ 6mm

Take Care Not To
Damage Wall Surface

10mm

Step 2

Install wall profile and rail

Insert rail into
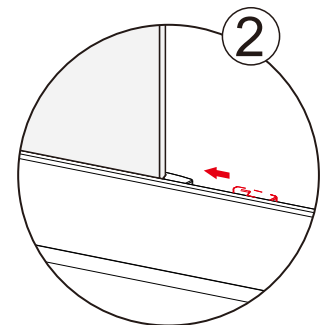wall profile

Adjustment
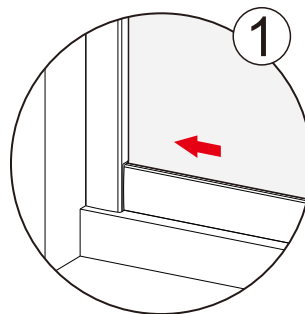20mm

[12]   [11]

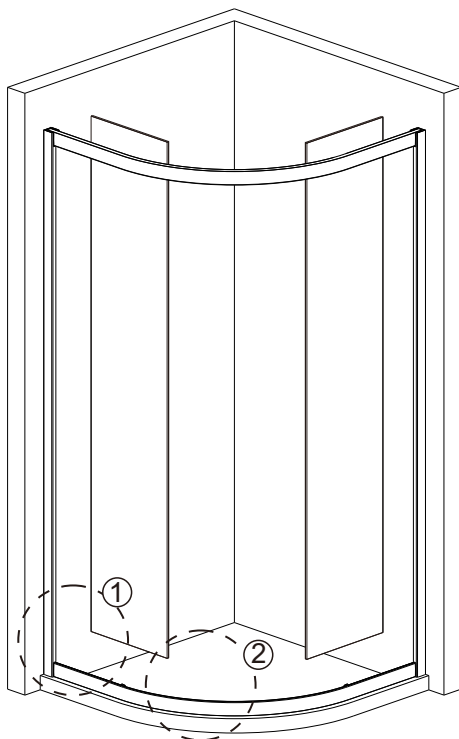Insert rail into
wall profile

Adjustment
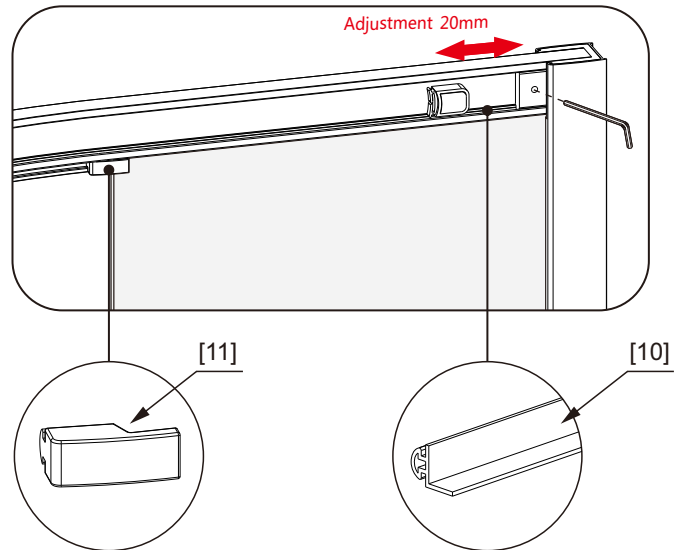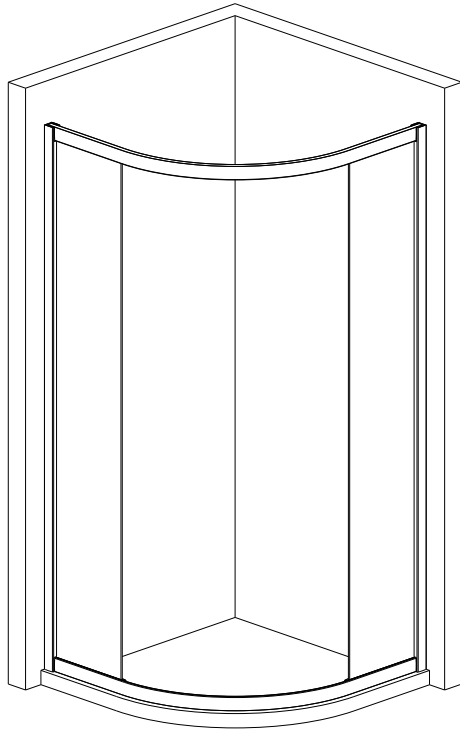20mm
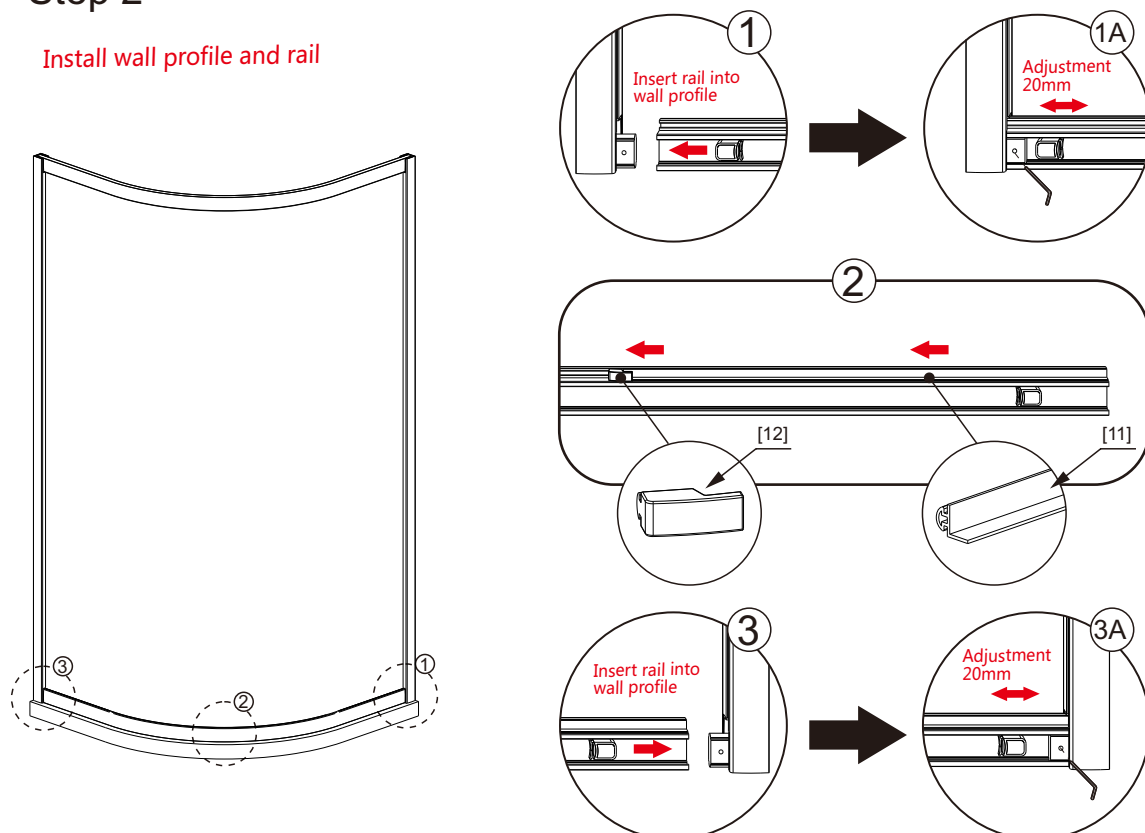
Step 3

Screw fix wall profile
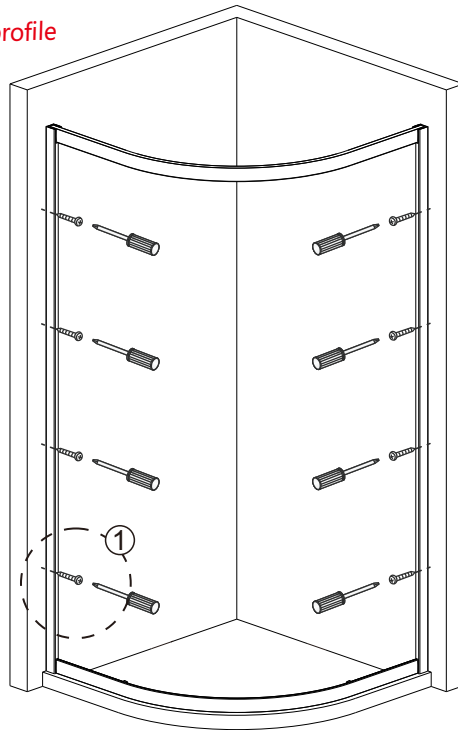
Step 4

Install fixed panel

Step 5
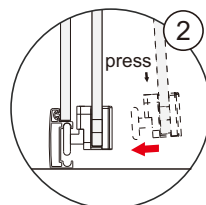
Chrome piece fix fixed panel
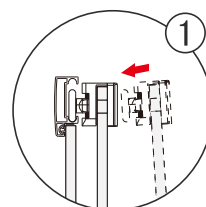
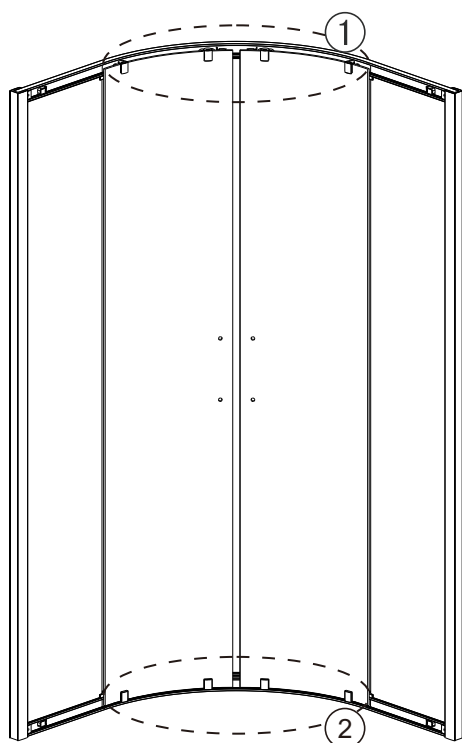Adjustment 20mm

[11]

[10]

Step 6

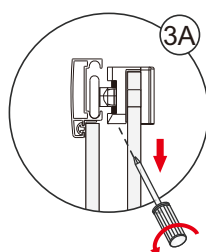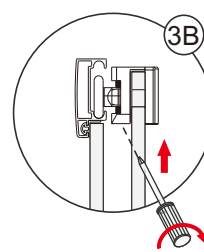Install rollers into moving panel
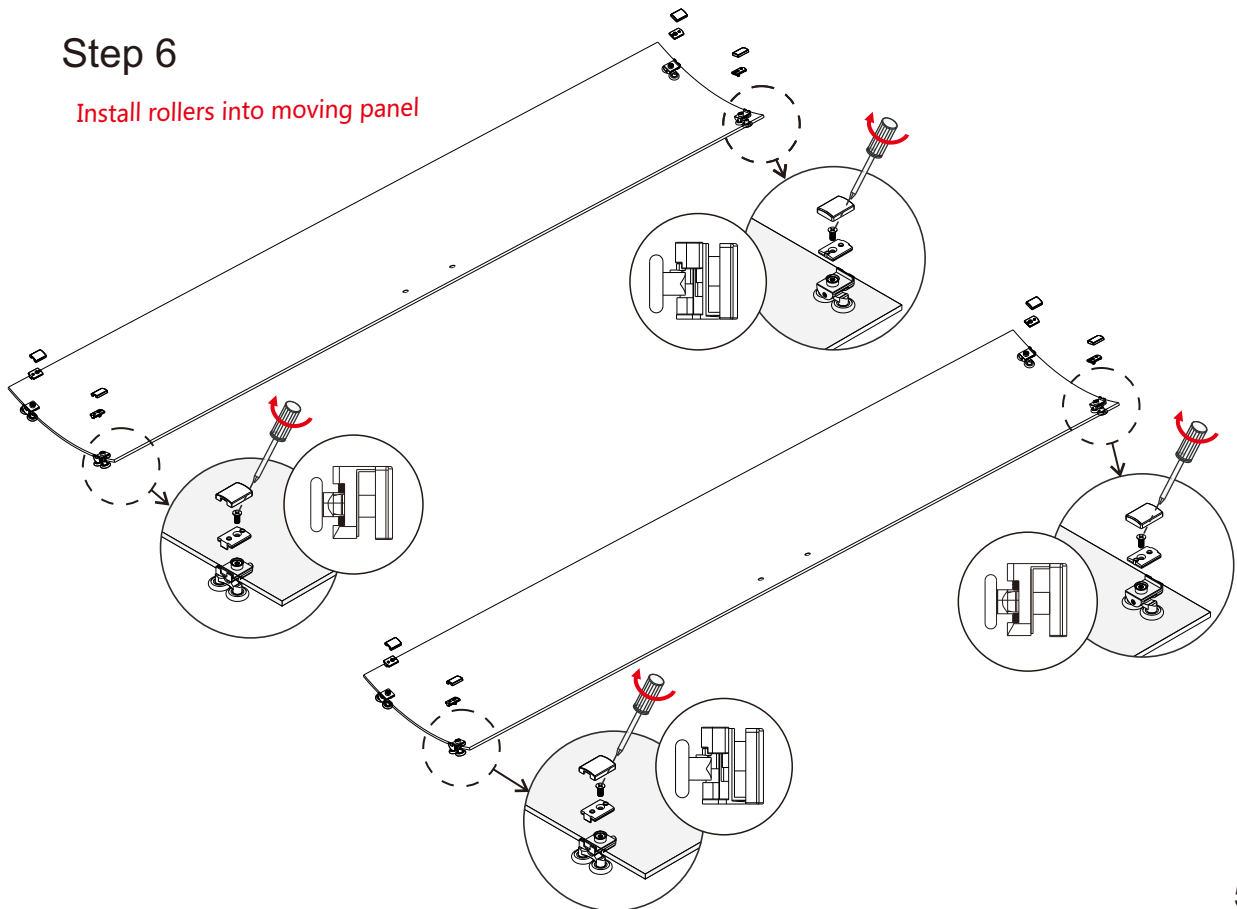
Step 7

Put moving panel into rails,Adjust reansonable height

① ②

① ②

press

if the roller does not fit in,
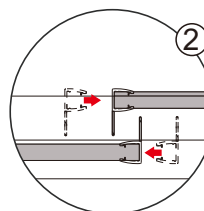pls press figure 3A to adjust and try again.
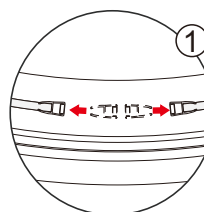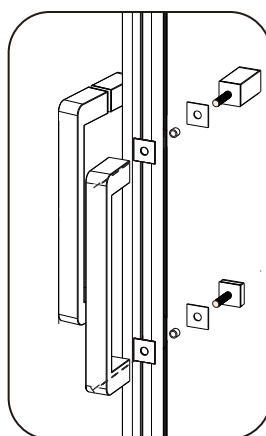
3A 3B
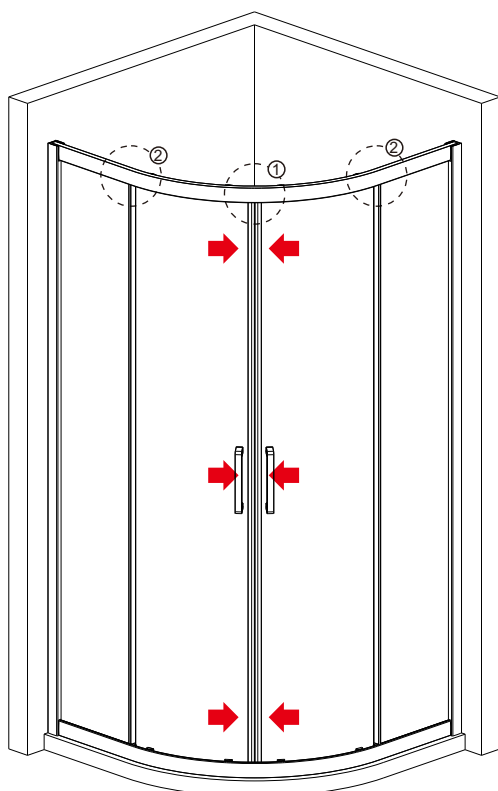
turn the screwdriver left ,
the glass goes down

turn the screwdriver right,
the glass goes up.

Step 8

Install Handle and waterproof seals

① ②

① ②
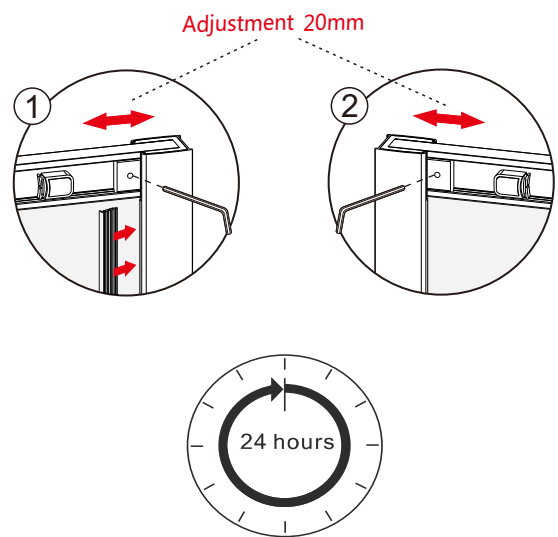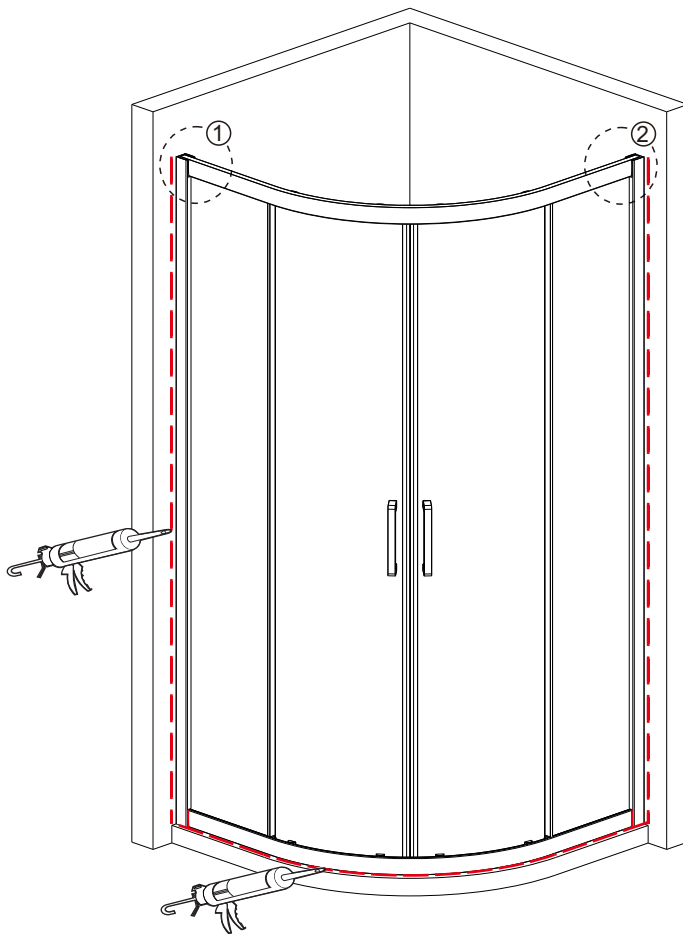
Shower room regulation method
1.STEP2 STEP3 adjust the installation size

2.STEP5 3A /3B adjustment of the moving glass door
magnetic strip suction

Step 9

Make good Adjustment, put vertical seals into panel,
finally put silicon

Adjustment 20mm

24 hours

Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only